

# READ THIS FIRST

VENTILATOR USER GUIDE

MODEL 718-B

**SUPERVAC** 



### **PERSONAL RESPONSIBILITY CODE**

The member companies of FEMSA that provide emergency response equipment and services want responders to know and understand the following:

1. Firefighting and Emergency Response are inherently dangerous activities requiring proper training in their hazards and the use of extreme caution at all times.
2. It is your responsibility to read and understand any user's instructions, including purpose and limitations, provided with any piece of equipment you may be called upon to use.
3. It is your responsibility to know that you have been properly trained in Firefighting and/or Emergency Response and in the use, precautions, and care of any equipment you may be called upon to use.
4. It is your responsibility to be in proper physical condition and to maintain the personal skill level required to operate any equipment you may be called upon to use.
5. It is your responsibility to know that your equipment is in operable condition and has been maintained in accordance with the manufacturer's instructions.
6. Failure to follow these guidelines may result in death, burns or other severe injury.



Fire and Emergency Manufacturers and Services Association, Inc.  
P.O. Box 147, Lynnfield, MA 01940 [www.FEMSA.org](http://www.FEMSA.org)

Copyright 2006 FEMSA. All Rights Reserved

## USER GUIDE

This manual covers the description, cautions, operation, and maintenance of the Super Vac 718-B

 **WARNING** Read this manual before operating the ventilator.

Save this guide for future reference.

## CONTENTS

1. BREAKAGE OR DAMAGE DURING SHIPMENT.....	2
2. GENERAL DESCRIPTION AND SPECIFICATIONS.....	3
3. PRODUCT SAFETY PRECAUTIONS.....	3
4. BEFORE OPERATING VENTILATOR.....	4
5. OPERATION.....	4
6. CHARGING THE BATTERY.....	5
7. MAINTENANCE AND RPAIR.....	5
8. WARRANTY.....	6
9. CONTACT INFORMATION.....	7
10. PARTS LIST.....	8
11. EXPLODED VIEW.....	9

## 1. Breakage or Damage During Shipment

The transportation company is fully responsible for all shipping damage and will resolve problems promptly if you handle it correctly. Please read these instructions carefully.

Examine the contents of all shipping cases. If you find any damage, call your transportation agent at once and have them make a description on the freight or express bill describing the damage and the number of pieces. Then write us and we will send you the original bill of lading. Get a claim blank from the express or truck company. Fill the claim form out. Attach the claim blank to the original bill of lading together with a copy of our invoice. Attach a memo on which you show the value of the damaged goods. Mail or hand these papers to your local transportation agent. They will process your claim with reasonable promptness.

Please note, we cannot and will not enter claims for damages. If we filed claim here, it would be sent to your local freight agent for verification and investigation. This time can be saved by your filing the claim directly. Every consignee is on the ground floor and in contact with the local agent who inspects the damaged goods, and thus, each claim can be given individual attention.

Since our goods are packed to comply with the regulations of all railroad, truck, and express companies, we cannot allow deduction from any invoice because of any damage, however, be sure to file your claim promptly. Our goods are sold F.O.B. factory. We take receipt from the transportation company certifying that the goods were delivered to them in good order, and our responsibility ceases.

It is seldom that any breakage or damage occurs in any of our shipments, and in no case will the customer be out any expense if they follow the above instructions.

Be sure to keep all damaged goods subject to examination of the truck or express company inspector, who may call on you some time later. These damaged goods, of course, will belong to them, and they will inform you what to do with them. If you dispose of these damaged goods, your claim may not be paid.

**2. General Description and Specifications**  **WARNING**

*Super Vac* ventilators are specifically designed to provide a convenient and portable source of air. *Super Vac* positive pressure ventilators are tested to AMCA PPV Standard 240-95, for use in extreme conditions.

Model #	RPM	Voltage	Motor	HxWxD	Weight
718-B	2500	24V, DC, 115V AC	1 Hp Variable Speed Speed	22" x 23.5" x 19.5"	68 lbs 99 lbs with battery

*Specifications are subject to change without notification. Refer to model decal affixed to ventilator to determine actual specifications.*

This ventilator is designed for high powered air movement. *Super Vac's* propeller produces a greater intake of air and eliminates turbulence at the tips. Each blade is dynamically balanced for high efficiency and long life.

**3. Product Safety Precautions**

- Do not use the ventilator for purposes other than its' intended use.
- Wear eye and ear protection when operating the ventilator.
- Never operate ventilator while fatigued.
- Do not disassemble or modify the ventilator in any way. Doing so may lead to mechanical failure or personal injury.
- Do not wear loose clothing that could become entangled in the operating ventilator.
- Never permit anyone to operate ventilator without proper instruction.
- Do not operate ventilator without proper inlet or outlet guards in place. If guards are missing or damaged, contact factory for replacements.
- Do not place fingers or other foreign objects through inlet or outlet guards. Should a foreign object enter the ventilator, immediately stop motor. Be certain all mechanical motion has stopped. Do not use with any power voltage other than the indicated voltage.
- Never handle energized power cords with wet hands.
- Do not place or operate ventilator on unsteady tables, slanted surfaces or other unstable surfaces. Never use this ventilator in any explosive environment.
- Never let extension cords or plug connection lay in water. Locate the ventilator so that it cannot fall into water inadvertently.

## 4. Before Operating Ventilator

- **⚠ CAUTION** Always operate this ventilator with a proper portable DC (supplied with unit) or 120V, 60 Hz power source.
- Never use power cords with frayed, cut, or brittle insulation.
- **⚠ CAUTION** A complete inspection of the ventilator should be made prior to operation.
- Inspect power cord plug for sound connections to the ground fault interrupter circuit.
- Check all threaded fasteners for proper tightness.
- Inspect inlet and outlet guards for damage or missing pieces. Replace damaged or missing guards before operating ventilator.

## 5. Operation

**⚠ CAUTION** Check ventilator inlet and outlet guards for obstructions. Check and remove from immediate surrounding area any objects that could be drawn into the ventilator intake.

**⚠ WARNING** Use caution not to direct toxic fumes into confined spaces with the ventilator. Please refer to the Super Vac Training Manual for Smoke Ventilation for comprehensive instruction on effective ventilation practices.

Insert power cord plug into 115V AC power receptacle to begin ventilation.

Move power switch located on battery pack to the desired speed to begin ventilation.

To stop ventilation move power switch to the off position.

## 6. Charging the Battery Pack

The battery pack contains a 24V lithium ion battery. Total discharging of the batteries is not required as a maintenance procedure.

To restore battery charge –

Insert extension cord from battery charger into charging plug on battery pack.

Plug battery charger into appropriate AC power supply

The charger will progressively recharge the batteries from the discharged state. After 5 hours the batteries will be restored to 100% of total capacity.

Battery can be charged while fan is still in use with AC power.

## 7. Maintenance and Repair

Maintenance should only be performed by experienced and trained personnel.

Be sure the ventilator is disconnected from the power source before performing any maintenance or repair. The motor is of heavy duty ball bearing construction. The unit is completely sealed and requires no lubrication for the life of the motor.

The ventilator blade should be specially checked for build-up of material or dirt which may cause an imbalance. Excessive imbalance can lead to accelerated wear on motor bearings and vibration. Remove ventilator guards. Clean blade and inside housing with mild detergent and water. Do not use abrasives, sharp instruments or caustic solvents that may scratch or damage the aluminum alloy blade.

Intake and exhaust guards are not interchangeable. When replacing guards after cleaning, position them with the rings to the outside with the row of spot welds holding the rings on the bottom.

## 8. Warranty

Super Vacuum Manufacturing Company warrants that the equipment is free from defects in materials and workmanship when used and operated for a period of five years. The responsibility of Super Vacuum Manufacturing Company under this limited warranty is limited to the repair and replacement of any parts which are found defective and which are returned to Super Vacuum Manufacturing Company at 3842 Redman Dr, Fort Collins, CO 80524 with transportation charges prepaid (C.O.D. shipments will not be accepted).

Prior to returning defective parts to SUPER VACUUM MANUFACTURING COMPANY, the original purchaser shall make a claim in writing to SUPER VACUUM MANUFACTURING COMPANY at the above address indicating the model number and type of defect. No parts or equipment will be received by SUPER VACUUM MANUFACTURING COMPANY for repair or replacement under this warranty without specific written authority from it in advance.

Any parts damaged by improper installation, overloading, abuse or accident of any type or cause are not covered by this warranty.

All equipment manufactured by us is pre-run and tested before leaving our plant, and is shipped in good working order and condition. We therefore extend to the original purchasers the following Limited Warranty for the period of five years from the original date of purchase:

1. This warranty does not apply to defects caused by accident, misuse, neglect, or wear and tear, nor can we be held responsible for incidental and consequential expense and loss, nor does this warranty apply to equipment where alterations have been executed without our knowledge or consent. These conditions are readily discernible when the equipment is returned to us for inspection.
2. On all component parts not manufactured by SUPER VACUUM MANUFACTURING COMPANY, their warranty is to the extent that the manufacturer of such component warrants them to SUPER VACUUM MANUFACTURING COMPANY, if at all. Look in your local business phone directory for the nearest repair station for the brand of parts you have or write to us for the address.
3. If equipment received is found to have been damaged in transit, a claim should be made against the carrier within three days, as we assume no responsibility for such damage.
4. Any service other than our Authorized Service voids this warranty.
5. This warranty is in lieu of and is intended to exclude all other warranties, express or implied, oral or written, including any warranties of MERCHANTABILITY or FITNESS for a particular purpose.



## 9. Contact Information



For parts or service information, contact:

Super Vacuum Manufacturing Company, Inc.

3842 Redman Dr.  
Fort Collins, CO 80524

Phone: 800-525-5224  
970-297-7100

Fax: 970-297-7099

Email : info@supervac.com  
Internet: www.supervac.com

10. Parts List

1	012-10263	1	GUARD 718 18" FRONT-PLATED
2	032-10713	8	10-24 NYLOK SELF LOCK NUT ZINC
3	032-10711	8	10-24 X 1/2" PHIL PH MS ZINC
4	032-10777	1	5/16-24 X 3/4" HEX CS ZINC
5	032-10787	1	5/16" LOCK WASHER USS ZINC
6	032-10791	1	5/16" FENDER WASHER ZINC
7	032-10745	2	1/4 - 20 X 1" HEX CS ZINC
8	032-10754	2	1/4" LOCK WASHER ZINC
9	008-10193	1	KEYSTOCK 3/16" X 1 3/8" SQUARE
10	008-10187	1	BUSHING BLADE MAUREY HQ 3/4"
11	003-10044	1	BLADE 18" 7 BLADE GAS FINISHED
12	018-10396	1	SHROUD 18" W/GUARD-PAINTED
13	032-10769	2	5/16-18 X 1" HEX CS ZINC
14	032-10790	2	5/16-18 NYLOK HEX NUT ZINC
15	032-10786	4	5/16" FLAT WASHER ZINC
16	072-15420	1	24V DC MOTOR - LEESON 1/2 HP
17	032-18803	2	1/2" X 13 X 4 1/2" BOLT
19	008-13375	2	FLAT FREE WHEEL
20	032-18804	6	1/2" WASHER
21	032-18802	2	1/2" X 13 NYLOK NUT
26	024-13473	2	FEET RUBBER CONE SHAPE VBM-4002
27	008-10189	6	PLUG FINISHING SQ RIBBED, BLACK 1"
28	032-13052	2	5/16-24 NYLOK HEX NUT ZINC
29	018-10404	1	TUBE FRAME 18" PAINTED
30	032-14564	2	3/8-16 X 2 1/2" SOCKET BUTTON HEAD CS ZN
31	032-11129	2	3/8" FLAT WASHER USS ZINC
32	008-10212	2	WASHER FLAT #17W14930 MICRO-PLASTIC

33	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
34	008-10192	2	SPRING A-180-S VALCO
35	032-14564	2	3/8-16 X 2 1/2" SOCKET BUTTON HEAD CS ZN
36	032-11129	2	3/8" FLAT WASHERUSS ZINC
37	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
38	019-15001	1	718 HANDLE PAINTED
39	008-14586	2	STOCK CAP COVER FOR 718 HANDLE TAB
40	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
41	024-13284	1	SPRING SADDLE ISC #0198 W.DBL GRIND
42	024-13284	1	SPRING SADDLE ISC #0198 W.DBL GRIND
43	072-15234	1	KNOB
45	019-15002	1	TILT LEVER 718
46	072-15417	1	BATTERY PACK CRADLE
47	032-10732	2	1/4-20 X 1 3/8" PHIL PH MS ZINC
48	072-14964	1	HOUSING, BATTERY CONNECTOR
49	072-14965	2	PIN TERMINAL CONNECTOR
51	072-14965	2	PIN TERMINAL CONNECTOR
52	032-10693	2	#8 FLAT WASHER ZINC
53	032-13571	2	8-32 NYLOK HEX NUT ZINC
54	072-15416	1	COMPONENT MOUNT PLATE
55	032-10686	2	#8 X 5/8" PHIL PH SMS ZINC
56	034-10941	2	8-32 X 3/4" PHIL PH MS SS
57	IONPAC2.0	1	BATTERY PACK - IONPAC2.0
58	025-13361	1	LABEL - BATFAN - SERIAL NUMBER
59	025-13362	1	DECAL 718B YELLOW SAFETY
60	025-13426	1	SUPER VAC VERT BLACK

11. Exploded View

