SUPER VAC
THE VENTILATION SPECIALISTS

3842 Redman Dr
Fort Collins, CO 80524
1-800-525-5224
www.supervac.com

Mountain Mister **Patent Pending**

No assembly required. Attach Mountain Mister assembly to the exhaust side of ventilator. Open latch by rotating handle CCW. Position fixed end of bracket around guard wire such that mister assembly is centered on the guard. Slip latch hook around nearest guard wire. Rotate latch handle CW to secure mister to guard. Attach supply hose to shut-off valve.

Due to variations in manufacturing tolerances, some adjustment may be necessary to assure proper fit. Provision for a particular fan guard is provided via slotted mounting holes on the swivel latch. Loosen the (2) 8-32 screws retaining the latch to the bracket. Position the latch such that a minimal amount of flex to the guard occurs when the latch is fully closed (latch handle rotated fully clockwise). Tighten screws to secure latch in desired position. Too much tension on latch may bend guard wire or break welds. Replace any damaged guard before using ventilator.

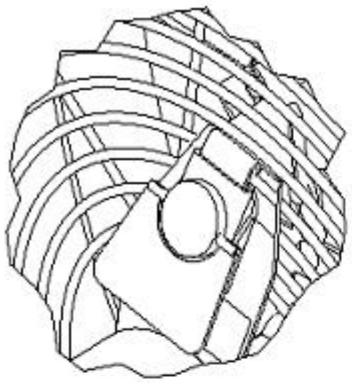

DETAIL A
Mount Mister to the exhaust side of ventilator. Adjust latch to fit guard by loosening (2) 8-32 screws retaining latch to bracket.

Caution: Do Not Bend Guard

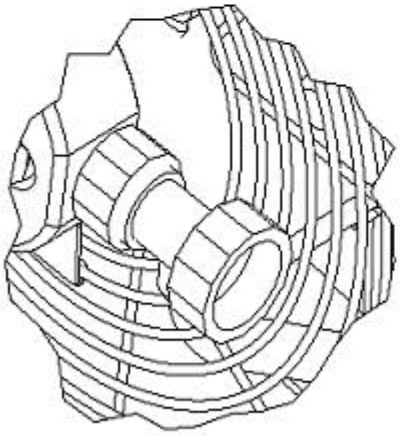

DETAIL B
Attach hose to shut-off valve.

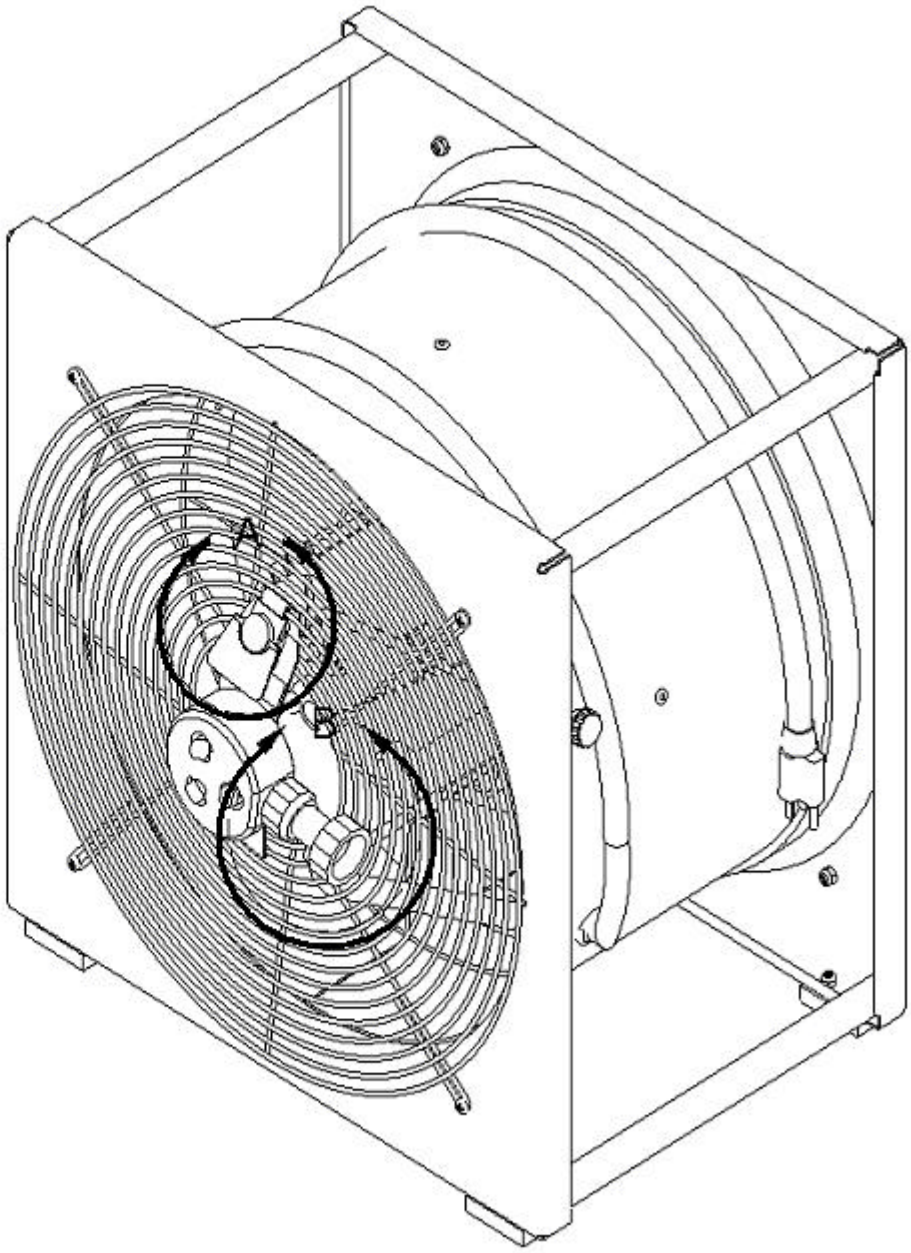

Mountain Mister – Parts List
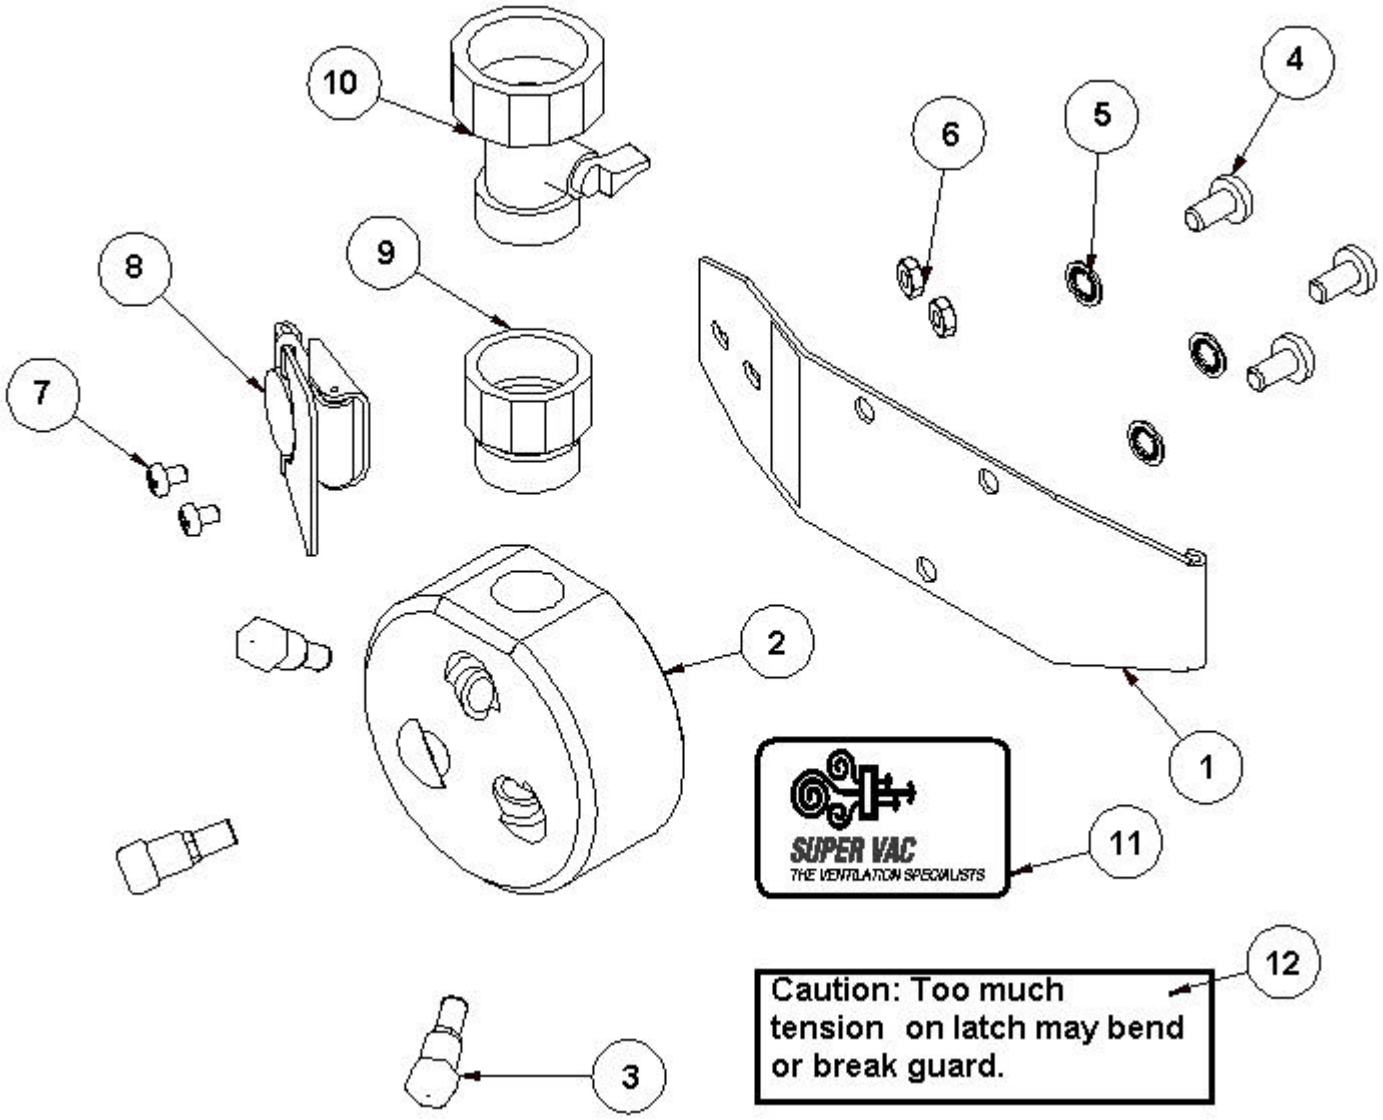
	ITEM	QTY	DESCRIPTION
1	019-17000	1	Bracket, Mounting, Mtn Mister, SS
2	008-14307	1	Block, Mtn Mister
3	008-14305	3	Nozzle, Brass, Hago Mister
4	034-11001	3	Screw, ¼-20 x ½ , PHP, SS
5	034-11030	3	Washer, Lock, Internal, ¼, SS
6	034-10950	2	Nut, 8-32, Hex, SS
7	034-10938	2	Screw, 8-32 x 3/8, PHP, SS
8	008-14306	1	Latch, Black, Southco, Mtn Mister
9	008-14308	1	Adapter, NPT to Hose, Swivel, Brass
10	008-14309	1	Valve, Ball, Brass, Mtn Mister
11	025-14346	1	Decal, Mtn Mister, Super Vac, Gold
12	025-14347	1	Decal, Caution, Mtn Mister, Gold